


DSK-OPBM001

This Wire Set can not be used without the Main Unit of DSPARK MAX sold separately.

Wiring Illustration

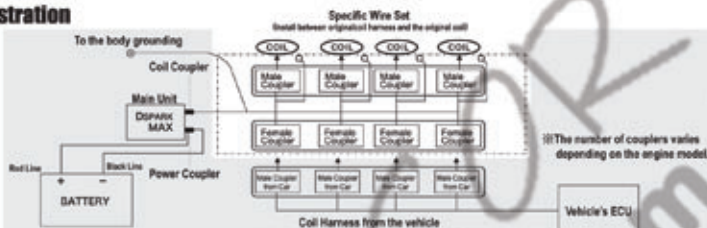

Typical Application	CC	Car Model	Engine Model	Production Year/Month
316Ti (E46)	1600	GH-AT18	N42B18A	'03 3~
318ci/ci/Ti (E46)	1800	GH-AY20/AU20	N42B20A	'03 3~
320i (E90)	2000	ABA-VA20	N46B20B	'05 4~
320i TOURING (E91)	2000	ABA-VR20	N46B20B	'05 4~
320i COUPE (E92)	2000	ABA-WR20	N46B20B	'05 4~

- ① Take off the battery terminals of both Plus and Minus. Then remove the engine head cover and any other obstacle part for taking off the Ignition Coils.

●For BMW



●For MINI (Cooper/One)



② Fitting of Coil Harness

- Take off the original coupler from the coil.
- Pull out the Ignition Coils from plug hole.



CAUTION

In order to pull out the coil, hold the coil itself and do not hold the harness for pulling out the coil. It will damage the harness if the coil is pulled out without taking off the coupler.

※The grounding wire for coil is not necessary for this car model because of the system.

- Connect the Wire Set in between the coils and original coupler.
- Please take the same steps for four coils.



- ④ After fixing the specific Wire Set with coils, the remaining coupler of wire set to be connected with the Main Unit. Connection of the wire set with the Main Unit is as shown in the installation manual of DSPARK MAX Main Unit sold separately.

DSK-OPBM001 BMW 宝马



DSK-OPBM001/2



DSK-OPBM001/2