

## DSK-OPF001

This Wire Set can not be used by itself. Please install with the Main Unit of DSPARK MAX sold separately.


Typical Car Application	CC	Car Model	Engine Model	Year of Production
IMPREZA	2000	GDA・GDB	EJ20	'00 8~'07 5
	2000	GGA・GGB	EJ20	'00 8~'07 5
FORESTER	2000	SG5	EJ20T	'02 2~'07 12
	2500	SG9	EJ25T	'04 2~
LEGACY B4	2000	BE5・BE9	EJ20	'98 12~'03 3
LEGACY WAGON	2000	BH5	EJ20	'98 6~'03 4

- ① Take off the battery terminals of both plus(+) and minus(-). Remove the battery from a car by taking off the battery holder.

Take off the battery terminals.




- ② Take apart the 16pins connector located in front of washer tank.

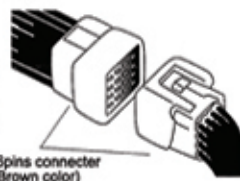

16pins connector (Brown color)

- ③ Install the Wire Set in between 16pins connector as illustrated.

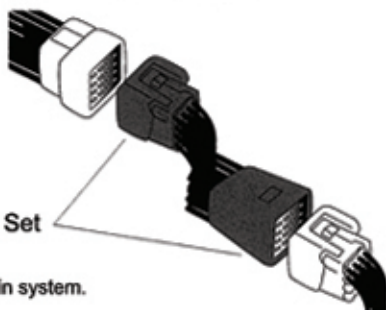

About Grounding wire of Coil

:This vehicle doesn't contain the grounding wire of Coil in system.

- ④ After the installation of Wire Set is completed, connect the wire for the main unit with coil coupler as illustrated in the installation manual of main unit.  
 ⑤ Return the battery to the original position and re-fix it firmly.  
 ⑥ After the installation of wire set is completed, please follow the installation manual of main unit.

# DSK-OPF001 SUBARU 斯巴鲁

