


# DSK-OPH001

This Wire Set can not be used by itself. Please install with the Main Unit of DSPARK MAX sold separately.

## Wiring Illustration

Wire Set (Specific for individual engine model) to be fitted in between original coil and the coil harness.

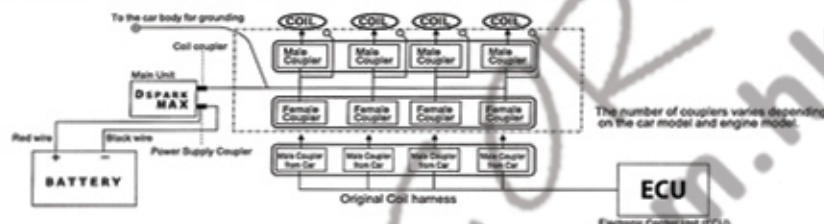

Typical Car Application	CC	Car Model	Engine Model	Year of Production
S2000	2000	AP1	F20C	'99 11~'05 10
ACCORD	2200	AP2	F22C	'05 11~
	2000	CL7 · 8	K20A	'02 10~
	2000	CM1	K20A	'02 10~
	2400	RW11 · RNW11 · W11	K24A	'02 10~
INTEGRA CIVIC	2000	DC5	K20A	'01 8~'07 02
	1700	EU3 · 4	D17A	'00 9~'05 8
	2000	EP3	K20A	'01 12~'05 8
	2000	FD2	K20A	'07 3~

There are some other applicable car models. For details, please refer to the application table.

- Take off the battery terminals of both plus(+) and minus(-). Remove the battery from a car by taking off the battery holder.



- Note: 1. Depending on the car model, the design of cover may differ from illustration.  
2. The cover may not be re-fixed because of the installed Wire Set

### ② Fitting of Coil Harness

- Take off the original harness from the coil
- Connect the Wire Set in between the coils and original coupler.
- Please take the same steps for four coils.



### ③ Fitting of Grounding wire of Coil

- Take off the fixing bolt of ignition coil.
- Fit the grounding terminal of the Wire Set with the removed bolt and tighten at the original position.
- The grounding wires to be fixed with all four coils.



- After the installation of Wire Set is completed, connect the wire for the main unit with coil coupler as illustrated in the installation manual of main unit.
- The grounding wire from coil harness also to be connected with car body for grounding.
- After the installation of wire set is completed, please follow the installation manual of main unit.

# DSK-OPH001 HONDA 本田

