

DSK-OPH003


This Wire Set can not be used without the Main Unit of DSPARK MAX sold separately.

Wiring Illustration




Typical Application	CC	Car Model	Engine Model	Production Year/Month
LEGEND	3500	KB1	J35A	'07~
LAGREAT 3.5	3500	RL1	J35A	'06 12~
ODYSSEY	3000	RA8 - 9	J30A	'00 1 ~ '03 9
MDX	3500	YD1	J35A	'03 7~
ELYSION	3000	RR3 - 4	J30A	'04 5~
INSPIRE	2500	UA4	J25A	'98 10~ '03 6
	3000	UC1	J30A	'03 6~
	3500	UA5	J32A	'98 10~ '03 6

- ① Take off the battery terminals of both Plus and Minus. Then remove the engine head cover and any other obstacle part for taking off the Ignition Coils.

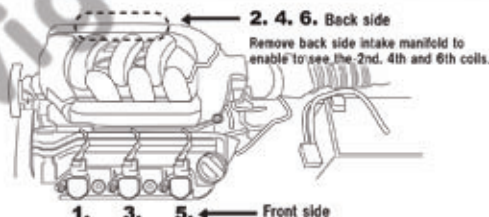


② Fitting of Coil Harness

- Take off the original coupler from the coil No. 1, 3, and 5. (Front side)
- Please take the same steps as above 1 for the coil No. 2, 4, and 6. (Back side)
- Connect the Wire Set in between the coils and original coupler.
- Please arrange the Wire Set not to interfere any other component in the engine compartment

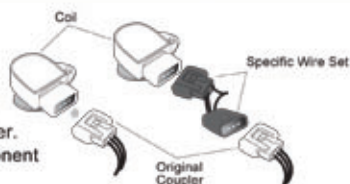

③ Fitting of Grounding wire of Coil

- Take off the fixing bolt of ignition coil.
- Fit the grounding terminal of the Wire Set with the removed bolt and tighten at the original position.
- The grounding wires to be fixed with all four coils.

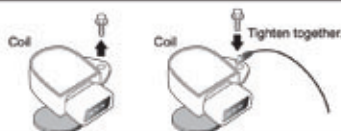

- ④ After fixing the specific Wire Set with coils, the remaining coupler of wire set to be connected with the Main Unit. Connection of the wire set with the Main Unit is as shown in the installation manual of DSPARK MAX Main Unit sold separately.

DSK-OPH003 HONDA 本田

