




DSK-OPMA002

This Wire Set can not be used without the Main Unit of DSPARK MAX sold separately.

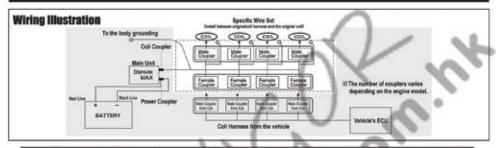


Typical Application	CC	Car Model	Engine Model	Production Year/Month
MPV	3000	LWFW	AJ	'02 2~
TRIBUTE	3000	EPFW	AJ	'04~


1 Take off the battery terminals of both Plus and Minus. Then remove the engine head coverand any other obstacle part for taking off the Ignition Coils.

ディースバークマックス

ANCED ELECTRIC FLOW SYSTEM

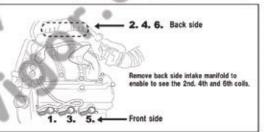


- ② Fitting of Coil Harness
- 1. Take off the original harness from the coil No.1, 3, and 5, (Front side)
- 2. Please take the same steps as above 1 for the coil No.2, 4, and 6. (Back side)
- 3. Connect the Wire Set in between the coils and original coupler.
- Please arrange the Wire Set not to interfere any other component in the engine compartment

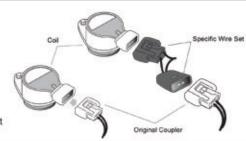

3) Fitting of Grounding wire of Coil

- 1. Take off the fixing bolt of ignition coil.
- 2. Fit the grounding terminal of the Wire Set with the removed bolt and tighten at the original position.
- 3. The grounding wires to be fixed with all four coils.

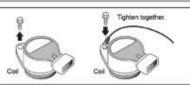

After fixing the specific Wire Set with coils, the remaining coupler of wire set to be connected with the Main Unit. Connection of the wire set with the Main Unit is as shown in the installation manual of DSPARK MAX Main Unit sold separately.

DSK-OPMA002 MAZDA 馬自達



