


DSK-OPMA003

This Wire Set can not be used without the Main Unit of DSPARK MAX sold separately.

Typical Application	CC	Car Model	Engine Model	Production Year/Month
RX-7	654×2	FD3S	13B	'91 10~'03

- ① Find out the position of Ignition Coil Coupler.

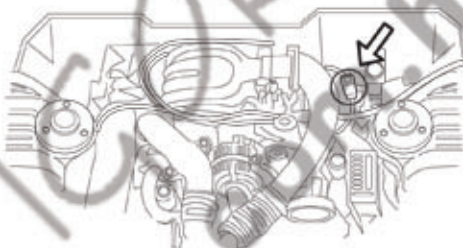


- ② Take off the Coil Coupler temporarily.



- ③ Install the Wire Set in between the Coil Coupler as taken off at the above step.

※The grounding wire for coil is not necessary for this car model because of the system.

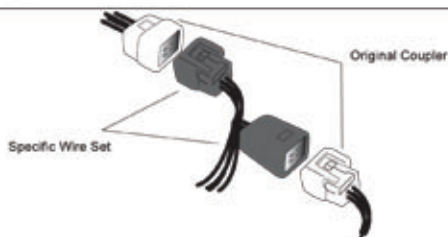

- ④ After fixing the specific Wire Set with coils, the remaining coupler of wire set to be connected with the Main Unit. Connection of the wire set with the Main Unit is as shown in the installation manual of DSPARK MAX Main Unit sold separately.

DSK-OPMA003 MAZDA 馬自達

