


DSK-OPPC001

This Wire Set can not be used by itself. Please install with the Main Unit of DSPARK MAX sold separately.

Typical Car Application	CC	Car Model	Engine Model	Year of Production
206XS/CC	1600		NFU	
C3	1600		NFU	


- ① Take off the battery terminals of both plus(+) and minus(-).

- ② Take off the ignition coupler located as illustrated.

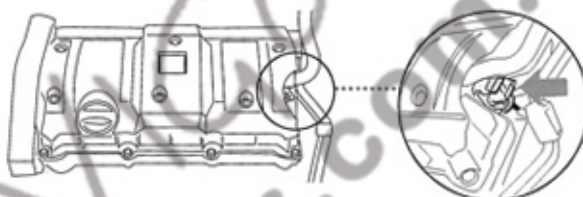

- ③ 1. Take off the original harness from the coil
 2. Connect the Wire Set in between the coils and original coupler.

About Grounding wire of Coil:
 This vehicle doesn't contain the grounding wire of Coil in system.

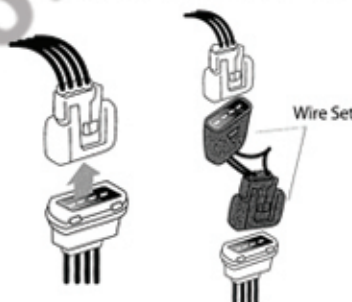

- ④ After the installation of Wire Set is completed, connect the wire for the main unit with coil coupler as illustrated in the installation manual of main unit.
- ⑤ After the installation of wire set is completed, please follow the installation manual of main unit.

DSK-OPPC001 PEUGEOT 标致

CITROEN 雪铁龙

