


DSK-OPT001

This Wire Set can not be used by itself. Please install with the Main Unit of DSPARK MAX sold separately.

Wiring Illustration

Wire Set (Specific for individual engine model) to be fitted in between original coil and the coil harness.

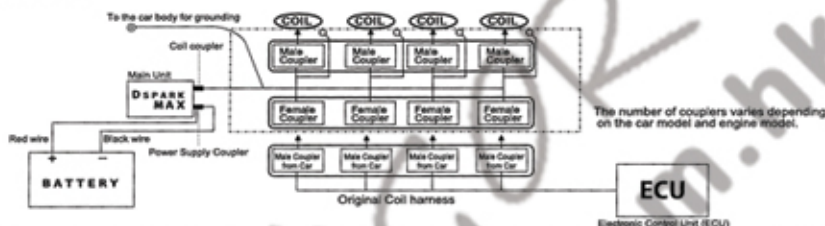


Typical Car Application	CC	Car Model	Engine Model	Year of Production
ALTEZZA	2000	SXE10	3S-GE	'98 10~'05 7
ALPHARD G-V	2400	ANH10-15W	2AZ-FE	'02 5~
WISH	1800	ZNE10-14	1ZZ-FE	'03 1~
	2000	ANE10-11	1AZ-FSE	'03 4~
VITZ	1800	KSP90	1KR-FE	'05 2~
	1300	SCP13	2SZ-FE	'02 12~'05 1
ESTIMA	1500	NCP91	1NZ-FE	'05 2~
COROLLA	2400	ACR30-40-50-65	2AZ-FE	'00 1~
	1300	NZE120	2NZ-FE	'00 8~
	1500	NZE-N120-1240-1410-1440	1NZ-FE	'00 8~
	1800	ZZE122-124	1ZZ-FE	'00 8~
		ZZE123	1ZZ-FE	'00 8~
		ZRE142-1420-144-1440	2ZR-FE	'06 10~
HARRIER	2400	ACU10-15-30-35	2AZ-FE	'00 11~
PRIS	1500	NHW10-11	1NZ-FXE	'97 12~'03 8
		NHW20	1NZ-FXE	'03 8~
		NCP30	2NZ-FE	'00 2~
bb	1300	GNC20-25	K3-VE	'05 12~
	1500	NCP31-34-35	1NZ-FE	'00 2~

There are some other applicable car models. For details, please refer to the application table.

- ① Take off the battery terminals of both plus(+) and minus(-). Remove the battery from a car by taking off the battery holder.



In case an air cleaner box is installed, take off the box by removing the fixing bolts and nuts.

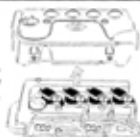


In case an engine cover is fixed, please take off the engine cover by removing the fixing bolts and nuts.

- ② Fitting of Coil Harness
1. Take off the original harness from the coil
2. Connect the Wire Set in between the coils and original coupler.
3. Please take the same steps for four coils.



- ③ Fitting of Grounding wire of Coil
1. Take off the fixing bolt of ignition coil.
2. Fit the grounding terminal of the Wire Set with the removed bolt and tighten at the original position.
3. The grounding wires to be fixed with all four coils.

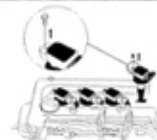

- ④ After the installation of Wire Set is completed, connect the wire for the main unit with coil coupler as illustrated in the installation manual of main unit.
⑤ The grounding wire from coil harness also to be connected with car body for grounding.
⑥ After the installation of wire set is completed, please follow the installation manual of main unit.

DSK-OPT001 TOYOTA 丰田

DAIHATSU 大发

